

CompactFloor® BASE



Installation




Start laying in the left-hand corner of the room. Do not press the edge insulation strips together.



Shorten the last element of each row to length (e.g. using a Diamaster circular saw blade or a Jigsaw blade T141 HM, Bosch).



Start with a remaining piece (≥ 20 cm) in offset bond (joint offset ≥ 20 cm).

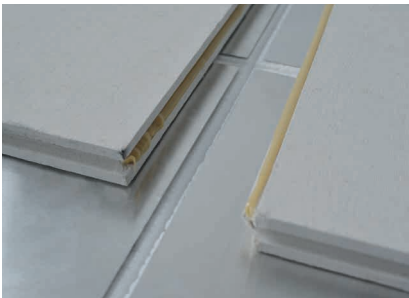

Add adhesive string to the underside of the groove as well as the upper side of the tongue. (approx. 10 m²/cartridge).



Push the element together in the tongue and groove connection.



Press the element down firmly. The adhesive will swell out of the joints slightly.



Cut individual cut-outs to size and adhere these, too, into the tongue and groove connections.



After a drying period of 24 hours, the excess adhesive can be pushed off.



Then the floor covering can be laid (Observe our releases → Data sheets on floor coverings | adhesive).